




Vacumat Basic

Spare parts

| | |
|-----------------------|---|
| Vacumat Basic | 1 |
| Spare parts list..... | 2 |



Vacumat Basic

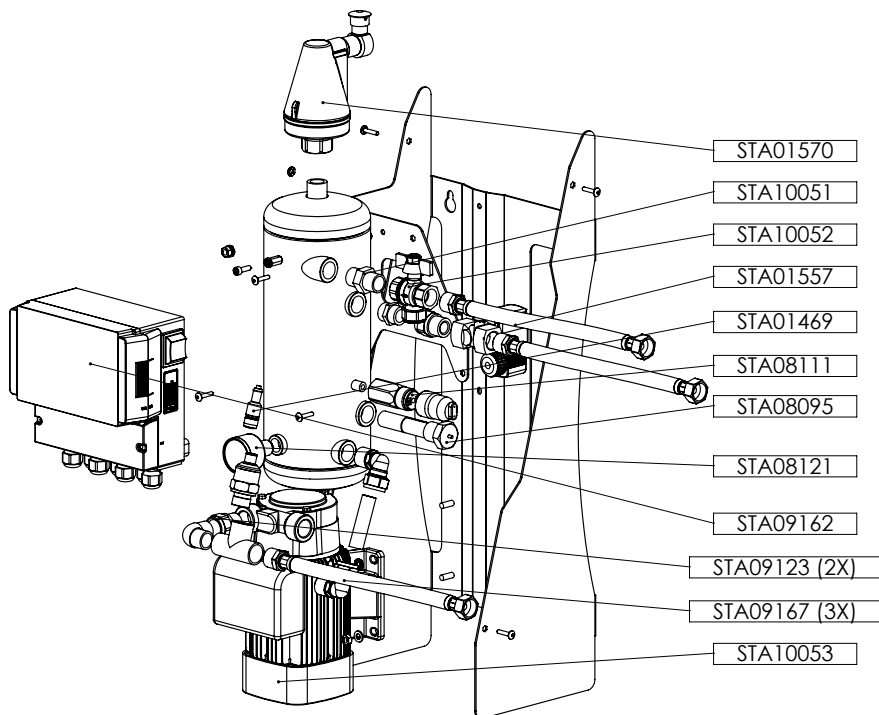



Spare parts list

| Flamco code | Description |
|-------------|----------------------------|
| STA01570 | Flexvent Super |
| STA10052 | Ball Valve 1/2" |
| STA01557 | Solenoid Valve 6213 |
| STA08111 | Vacuüm Pressure Switch |
| STA01469 | Pressure sensor 0-10 Bar |
| STA08095 | Float sensor 8187 |
| STA08121 | Pressure Gauge 3/8" |
| STA09162 | SCU control unit |
| STA09123 | Non-return valve 1/2" |
| STA09167 | Braided Hose 1/2" x 300 mm |
| STA10053 | Pump PQM-81-BS |
| STA10051 | Flow limiter |