


Flamconnect GW-10

ENG Installation and Operating instructions




- 1. Connect communication cable to the gateway**
If supplied put the powerplug into the socket.

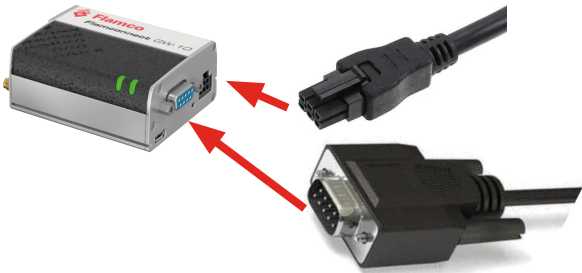


- 2. Mount the antenna on the 'cell' connection**
Fix the gateway near the device. Make sure the antenna is not surrounded by lots of metal parts or casing as this might interrupt the cellular signal.




- 3a. Flextronic controller (S90002)**
Connect RS485 cable to the left RS485 port of Flextronic controller. In the right RS485 a resistor needs to be placed. Make sure the RS485 communication setting is on 'Gateway'.

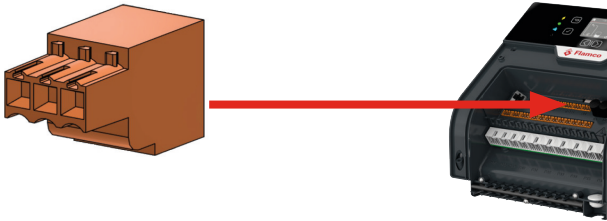


- 3b. LogoTronic controller (SG0004)**
Connect RS485 cable to the LogoTronic controller. Make sure the RS485 communication setting is on 'HFC protocol'.

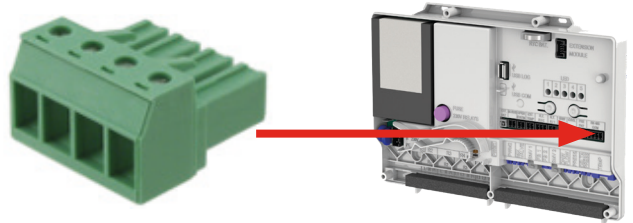


- 3c. SPC controller (S90000)**
Connect the bushing plug onto the controller. The power supply on the bushing plug onto the controller. The power supply on the serial must be enabled via the device menu.

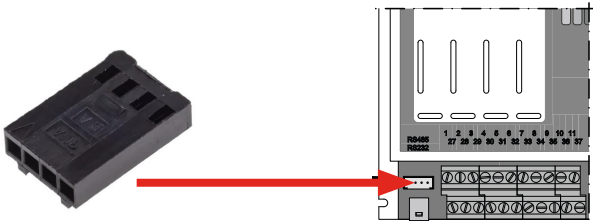

- 3d. Dekimo controller (S9001)**
Connect the bushing plug onto the controller.

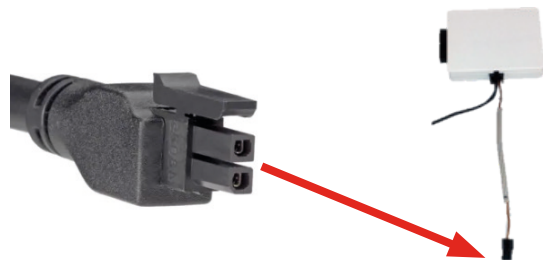


- 4. Registration gateway**
Register the gateway on the Flamconnect portal. Please use www.flamcogroup.com/register-gateway or scan the QR-code. Or fill in the serial number in the portal and press on 'register device'. The gateway needs 5 minutes to set up the connection.

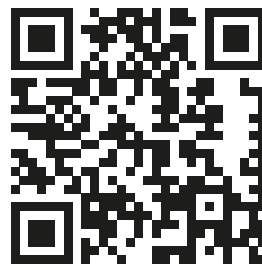

Flamconnect GW-10

ENG Installation and Operating instructions

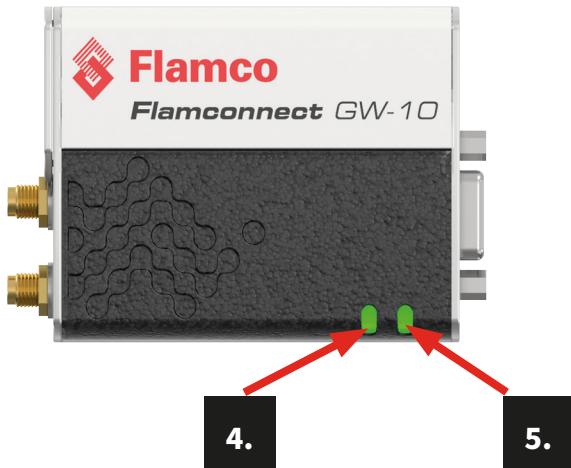

User Led (4)

Off	Startup script not started yet
Red (solid)	Startup script is running
Red (blinking)	The gateway is up and running, there is no internet connection
Amber (blinking)	The gateway is up and running, but no connection with Flamconnect Portal and no serial data from device
Amber (solid)	The gateway is up and running, serial data from device is received but there is no connection with Flamconnect portal
Green (blinking)	The gateway is up and running and connected with Flamconnect but there is no serial data from the device
Green (solid)	The gateway functions as supposed and is connected with the device and the Flamconnect portal
All colours (blinking)	Identification mode has been enabled from the Flamconnect Portal (duration: 30s)

Power Led (5)

Off	The gateway is not powered
Red	The gateway is powered but there is no SIM installed, no antenna mounted or no cellular network signal
Orange	The gateway is powered, SIM is installed, antenna is mounted and has cellular network signal

Safety requirements

Keep parts in their original packaging and unpack them only shortly before use.

Flamco is in no way liable for any damage due to improper transport and/or handling; does not accept any type of responsibility for damages to the device or to devices connected to it, to people or property arising from improper use or the incorrect installation and put into operation of the product.

Our general terms and conditions apply to our products see flamcogroup.com/terms.

For more information on the product, please contact Flamco or visit www.flamcogroup.com.